


DVR: The DVR Remote

What is DVR?

DVR stands for Digital Video Recording. It gives you complete control over your TV. Your favorite shows are always here, waiting for you, at the touch of a button on your remote control.

Basic Buttons

1. Press the **POWER** button  to turn the TV on and off.

2. Press the **VOL UP** and **DOWN** button to  control the volume.


3. Press the **CH UP** and **DOWN** button  to channel surf.


4. Press the **NUMBER** buttons to  select any channel by number.

5. Press the **MUTE** button to  turn off the sound.

6. Press the **LAST** button to  bring up the last channel you watched.

Advanced Buttons

1. Buttons in the top row  let you select which device to control. Press the **TV** button to control your TV, or press the **CBL** button to control your cable box. **IMPORTANT: You must press CBL to access your DVR features.**


2. Press the **GUIDE** button  to display the program guide. You can see what's on TV on any channel, over the next seven days.





- Press the **UP/DOWN** arrow buttons  to scroll through channel listings.









- Press the **LEFT/RIGHT** arrow buttons  to scroll through time slots.




- Press the **INFO** button to  get more detailed program information on any show.

- Press the **SELECT** button  to select whatever program or option you've highlighted. Once you find a show you like, press the **SELECT** button to tune to it instantly. If you select a future show, you will be given the option to record it on your DVR.

- Press the **EXIT** button  to clear the on-screen graphics and return to the show you were watching.

Special Buttons

1. Press the **LIST** button  to bring up a list of all the shows you've recorded, and recordings in progress. To view future recordings you've scheduled, press the **B** button.
2. Press the **INSTANT REPLAY** button  to rewind 10 seconds back so you can replay what you were just watching.
3. When you've paused or rewound the program, press the **LIVE** button  to take you to real time on the channel you're watching.
4. Press the **PLAY** button  to play your show at normal speed. If you press it twice very quickly, you'll see your show in slow motion.
5. The **FAST-FORWARD/REWIND** buttons   work the same as on your VCR, but with some extra features. When you press them twice, you go faster. When you press them three times, you move at the fastest speed, letting you skip around your show very quickly.





6. Press the **RECORD** button  to select a program to record. You can do this in two different ways - either while you're watching a program, or from the Program Guide. To learn more about recording, watch the **Recording Shows** tutorial on Answers on Demand.
7. Press the **PAUSE** button  to freeze the program you're watching.
8. Press the **STOP** button  to stop the program your watching.

Depending on when you press it, you get certain special options:

- If you press it while you're *recording a program*, you have the option of stopping your recording.
- If you press it while *watching a previously recorded program*, you get the additional options to erase the recording, save the recording, or resume watching.

Picture in Picture

With Picture in Picture, or PIP, you can watch two shows at once.

1. Press the ON/OFF button  to turn picture in picture on or off, and change the size.
2. Press the **SWAP** button  to swap the video in the main screen and the picture in picture window.
3. Press the **MOVE** button  to move the picture in picture window to another location on the screen.
4. Press the **CH +** and - button  to surf through channels inside the picture in picture window.

Use your Back button on your browser to return to Answers on Demand Home Page.