

Custom Settings: Favorite Channels

What are Favorite Channels?

Favorite Channels let you find your favorite shows quickly. You can scroll through only your Favorite Channels, skipping the channels in between.

For this to work, you have to set up a **Favorite Channels** list.

Setting Favorite Channels

Set Channels One at a Time

1. You can set up a **Favorite Channel** while you are watching it. When you find a channel you want to mark as a **Favorite**, press the **SETTINGS** button on your remote control to display the **Quick Settings** menu on your TV screen.
2. Press the **UP** or **DOWN** arrow to find **Add (current channel) to Favorites List**.
3. Press the **SELECT** button.
4. Press the **EXIT** button to return to your show.

Set Several Channels at Once

1. You can also set a list of **Favorite Channels** at the same time. Press the **SETTINGS** button on your remote control twice to display the **General Settings** menu.
2. Press the **UP** or **DOWN** arrow buttons to find **Viewer: Favorites**. Then press the **SELECT** button.
3. Press the **UP** or **DOWN** arrow buttons to find the channels you want.
4. For each channel you want to select as a favorite, press the **SELECT** button. A star will appear next to that channel, marking it as a favorite.
5. A list of the channels you have selected appears on the right-hand side of the screen under the heading, **CURRENT FAVORITES**. You can choose as many **Favorite Channels** as you want.

Remove a Channel From Your List

You can remove a channel by highlighting it in the channel list and pressing the **SELECT** button.

Finishing Your List

When you are finished, press the **A** button to accept. Then press the **EXIT** button to return to the show you were watching.

Surfing Favorites

1. Once you have set up your **Favorite Channels** using one of the methods above, you can surf through them easily. Press the **FAV** button to jump right to your **Favorite Channels**.
2. Each time you press the **FAV** button, you will jump to the next **Favorite Channel** on your list.

Use your Back button on your browser to return to Answers on Demand Home Page.