



Remote Control: More Features

In this tutorial, you will learn about the more advanced features and buttons on your remote control.

SETTINGS:

For Custom Settings

Press the **SETTINGS** button on your remote control to bring up the **Quick Settings** menu. From here, you can set Parental Controls, add Favorite Channels, Record a show, and more.

GUIDE:

The Program Guide

Press the **GUIDE** button to display the **Program Guide** on your screen. Here you can get detailed program information, and programs on other channels.

UP, DOWN, LEFT, RIGHT:

Moving Around the Screen

Use the arrow buttons to scroll through the various choices in the on-screen menus and displays.

For example: Use the **UP** and **DOWN** arrow buttons to scroll through channels in the **Program Guide** and use the **LEFT** or **RIGHT** arrow buttons to scroll through the times of day in a channel.

SELECT:

Making Choices

The **SELECT** button allows you to select whatever choice you've highlighted on screen. For example: When you find a show you want to see in the **Program Guide**, press the **SELECT** button to go to that show.

INFO:

Getting Information

Use the **INFO** button, on your remote control, to get more information about whatever you're watching. For Example: When you are watching a show, you can press the **INFO** button to get more information about the show. This gives you information such as the channel number, the name of the show, start and end times and the time of the day.

Press the **INFO** button again to get more detailed information.

OR

When you are in the **General Settings** menu, you can press the **INFO** button to get more information about the setting you've highlighted.

Page +/-:

Scrolling faster

If you want to scroll up and down faster, you can press the **PAGE +/-** button on your remote control.

For example: If you are in the **Program Guide**, this button will let you jump one page at a time, rather than channel by channel. You can also use this button when an on-screen menu prompts you to scroll through pages.

EXIT Button:

At any time, when you are in an on-screen menu, you can press the **EXIT** button, on your remote control, to clear the screen and return to your show.

A, B & C Buttons:

Special Functions

The **A**, **B** and **C** buttons allow you to do different functions at different times.

You will be told when to press these buttons in your on-screen menu and what they will do.

For example: When you are checking the **Program Guide**, you can use these buttons as follows:

- Press **A** to browse by Title.
- Press **B** to browse by Theme.
- Press **C** to browse by Time.

FAV:

Finding Favorite Channels

Press the **FAV** button to jump to your favorite channels. You have to program your Favorite Channels in advance for this to work. (View the **Custom Settings: Favorite Channels** tutorial to learn how.)

The VCR Buttons:

Pause, Rewind, Fast-Forward, Stop & Record

Your digital cable remote is a Universal remote that can control equipment like your VCR without the hassle of separate remotes.

1. Your Bright House Networks installer may have already programmed your remote for your VCR. If this is not set up, view the **Programming Your Remote** tutorial for more information.
2. Once this is set up, you can use your remote to pause, rewind, fast-forward, stop or record programs just like you're used to.

VCR/VOD Switch:

The **PAUSE**, **REWIND**, **FAST-FORWARD** and **STOP** buttons may also be used with Movies on Demand and Premiums on Demand.

You must set your remote properly to either **VCR** or **VOD** (Video On Demand) depending on which one you want to use.

- For VCR functionality, set the **VCR/VOD** switch to **VCR**.
- For VOD Functionality, set the **VCR/VOD** switch to **VOD**.

Note: Some remotes have a switch, others a button. If your remote has doesn't have either one, don't worry, you don't have to do anything. It will work automatically.

Use your Back button on your browser to return to Answers on Demand Home Page.