

## Parental Control: Unblocking Programs

Once you have activated Parental Control, you may want to turn it off at times. This way you can access the shows you want when your kids aren't watching.

### Unblocking When You Want to Watch a Show

1. If you tune to a show that has been blocked, you will see a Parental Control alert. The alert shows you whether the program is blocked by channel, time or rating.
2. Press the **SELECT** button. Enter your 4-digit PIN number on your remote control when prompted.
3. This will disable all blocks (channel, time and rating). You can now watch the show you were trying to see, and any other show on any other channel.

### Unblocking Only One Channel

1. If the show you are trying to watch is blocked because of a channel block, you can unblock by:
  - a. Press **SETTINGS** twice.
  - b. Go to **Block: Channels**.
  - c. Use the **UP** or **DOWN** arrows to select the blocked program.
  - d. Press **SELECT** to unblock.

### Disabling All Parental Controls at Once

1. There is also a quick way to disable all Parental Controls at once from any channel. Press the **SETTINGS** button at any time to display the **Quick Settings** menu.
2. Press the **UP** or **DOWN** arrow buttons to find **Activate Parental Control**.
3. Press the **SELECT** button.
4. Enter your PIN number when prompted.
5. All Channel, Time and Ratings are now disabled.

**Important:** Make sure you reactivate Parental Controls before your children watch TV.

## Reactivating Parental Controls

1. Press the **SETTINGS** button to return to the **Quick Settings** menu.
2. Press the **UP** or **DOWN** arrow buttons to find **Activate Parental Control**.
3. Press the **SELECT** button.
4. Enter your **PIN number** when prompted.

**Tip:** If you do forget to reactivate Parental Control, all blocks will automatically be activated the next time you turn your cable box **OFF**, and then **ON** again.

**Use your Back button on your browser to return to Answers on Demand Home Page.**